

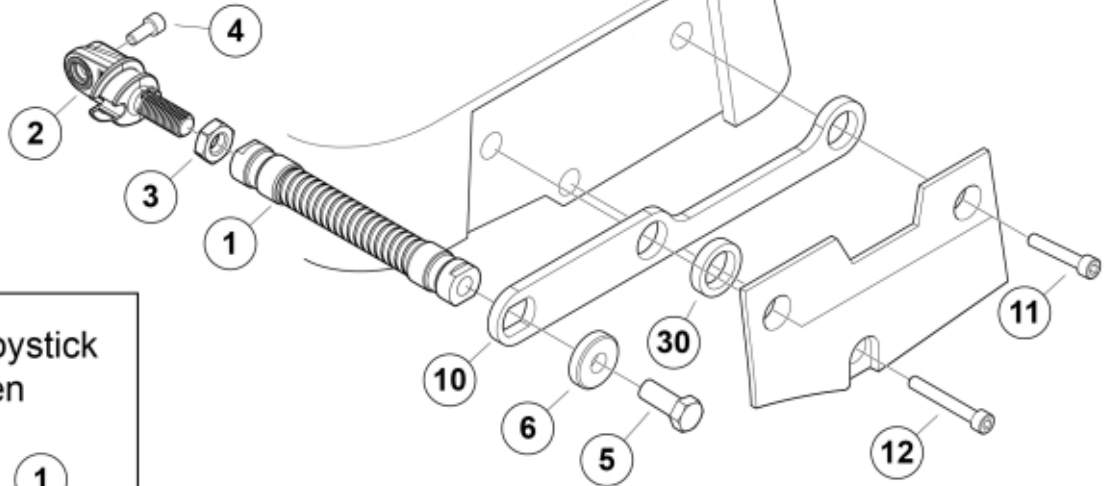




## A With joystick and screen

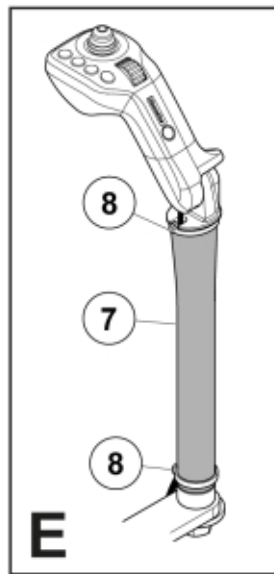

## C Without joystick and screen

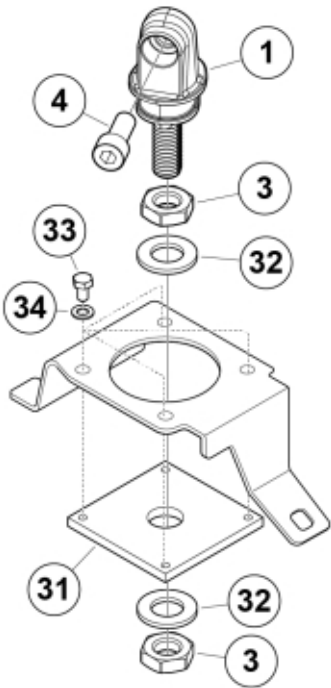

## B With joystick and without screen

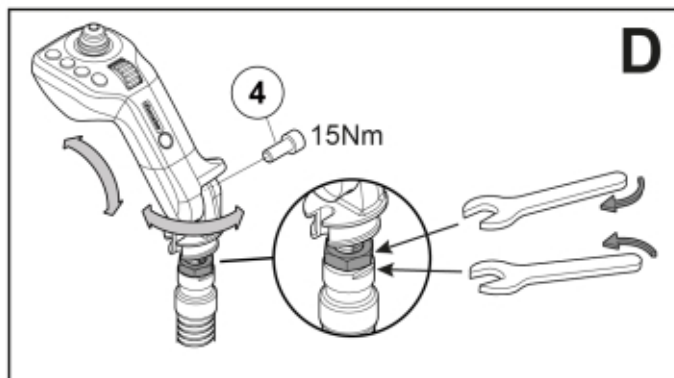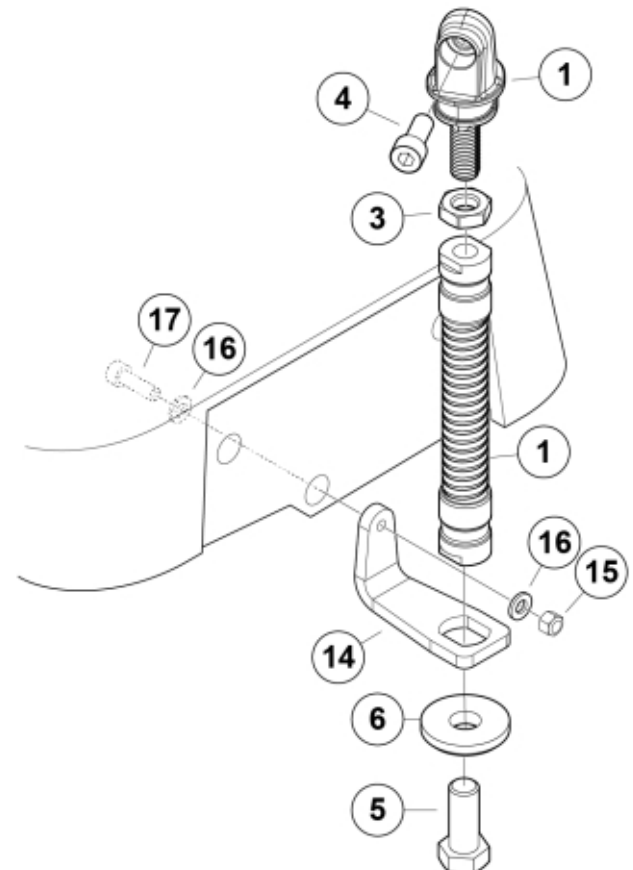

M 60053480

**Part assemblies** Joystick bracket kit

<b>PartNo</b>	<b>Pos</b>	<b>Qty</b>	<b>Name</b>	<b>Specifications</b>
60053480		1 PCS	Joystick bracket kit	
59030502	1	1 PCS	Gooseneck	L=150 mm
59030501	2	1 PCS	Bracket	
5011076	3	2	Nut	ML6M 4fzb
5004061	4	1	Screw	MC6S M8x20
5002102	5	1	Screw	M6S M12X30
59030506	6	1 PCS	Washer	TBR SB 13x36x6
5103053	7	1	Braided sleeving	
4500765	8	2	Cable tie, low profile	4.5x177
60040290	10	1 PCS	Joystick bracket	
5004032	11	2	Screw	MC6S M6x35
5004030	12	1	Screw	MC6S M6 x 45
60040309	14	1 PCS	Plate	
5011552	15	1	Locking nut	M6 Locking
5013108	16	2	Washer	BRB 6,4 x 12 x 1,5
5004913	17	1	Screw	MC6S M6x20
60040300	30	1 PCS	Spacer	
60083259	31	1	Joystick bracket	
5013104	32	2	Washer	13.5 x 24 x 2
5002403	33	4 PCS	Screw	M6S M4x8
5050106	34	4	Washer	4.3x9x0.8 BRB